
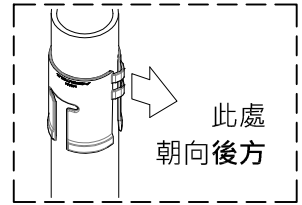
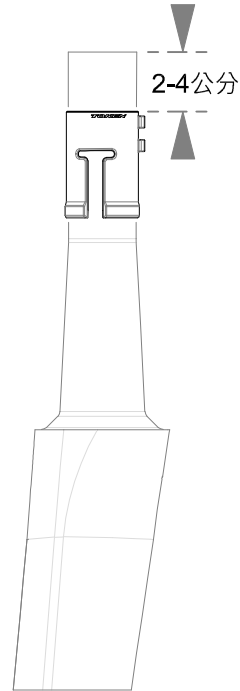



# 前叉豎管保護套 TK155-11S

## 組裝說明

安裝於  
一般前叉 (含避震前叉)

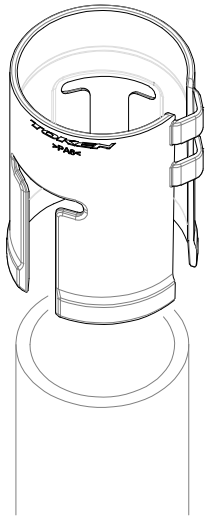

安裝於  
剎車油管穿入豎管之前叉



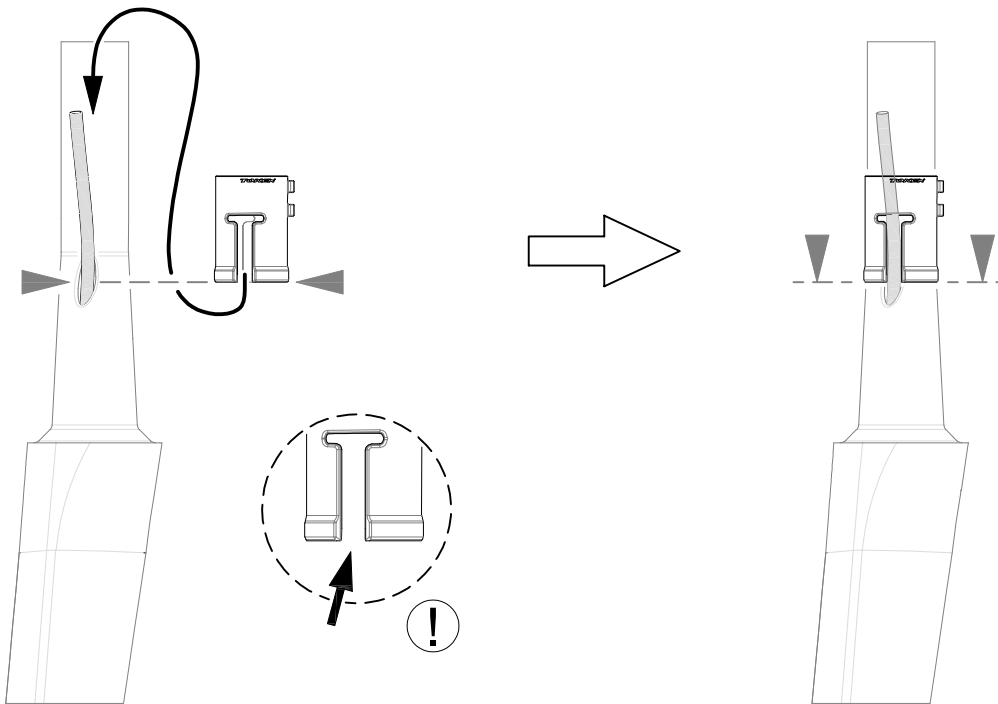


完成上述安裝後，再依照碗組製造商的說明書  
進行碗組的安裝。

For Forks  
without Thru-Steerer Brake Hose


**STEERER TUBE PROTECTOR**  
TK155-11S

Installation Instructions

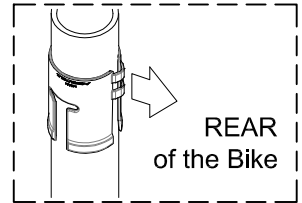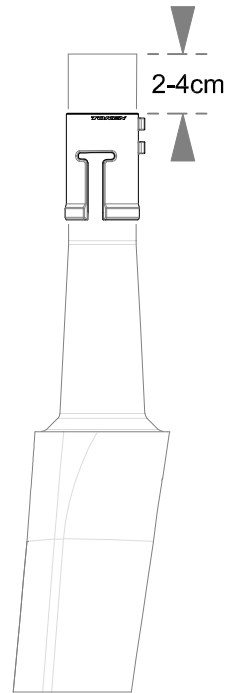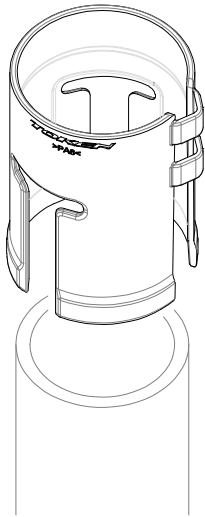

---

For Forks  
with Thru-Steerer Brake Hose

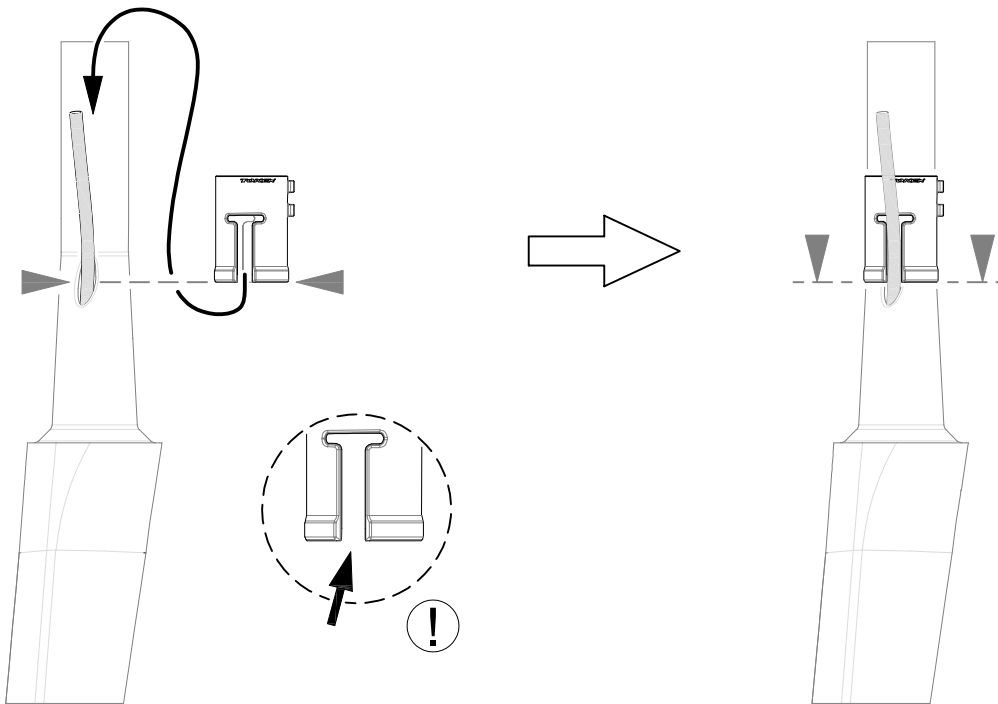

After fitting the steerer-tube protector, proceed with the headset installation following the manufacturer's instruction.